






#11670 POOL KIT INSTRUCTIONS

1. Assemble bottom or floor section

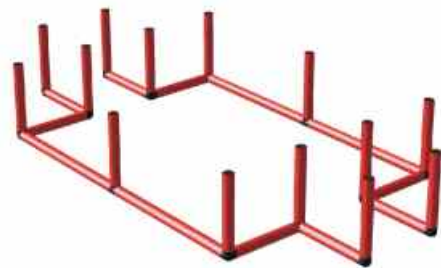

2. Assemble top (liner) section


- tubes go through the loops in the liner
- insert the 2 aluminum reinforcement tubes in middle of top frame

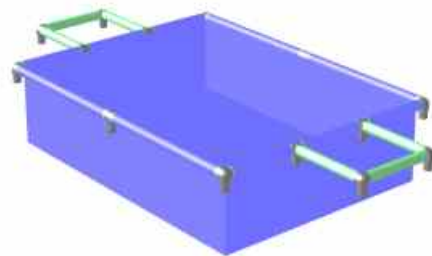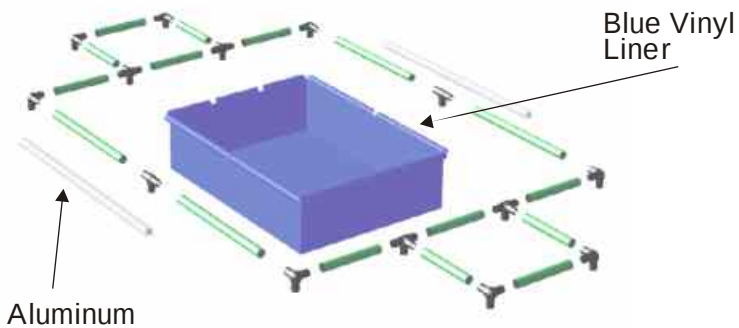

3. Insert top section into bottom section

4. Fasten structure with tube screws


5. Attach seat panels with black panel screws

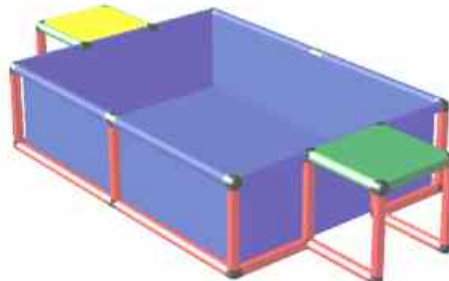

Copyright 2004 - Phunzone

136 Walker Street, Atlanta GA 30313
TEL: 404-521-9054 ORDER 800-477-6434 FAX: 404-222-8366
www.phunzone.com info@phunzone.com

Bottom

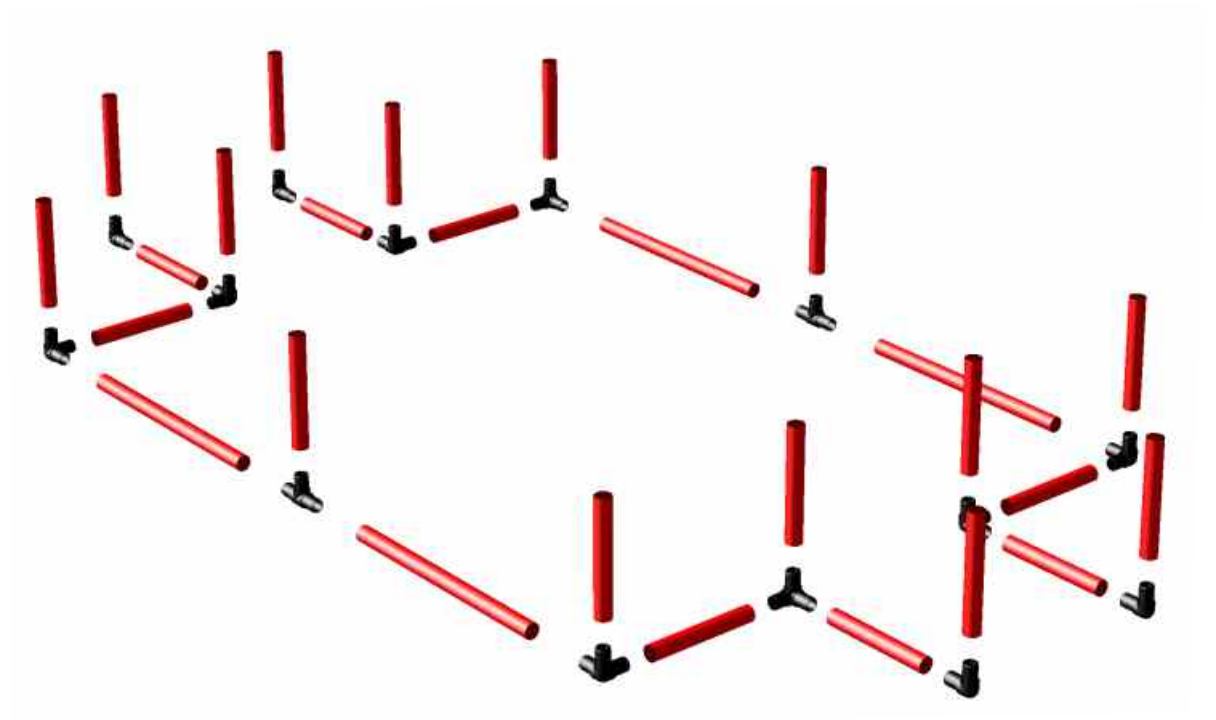

Top

