




2-PART STRAIGHT SLIDE ASSEMBLY

Kit Includes:

1. Slide Body
2. Slide Runout
3. 35cm tubes x 7
4. 15 cm tubes x 4
5. 2-way connectors x 6
6. Elbow connectors x 2
7. Black Panel Screws x 2
8. Screw Kit x 1
9. Tubes screws x 20
10. Plastic Screwdrivers x 3

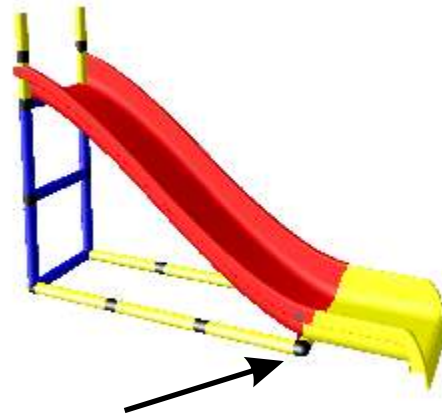


Note: Frame for new slide kit only goes out to then of slide - not end of runout



Recommend that you use a large steel screwdriver to attach Long Screws

TOP

See Page 3 if you have "plexi" panels

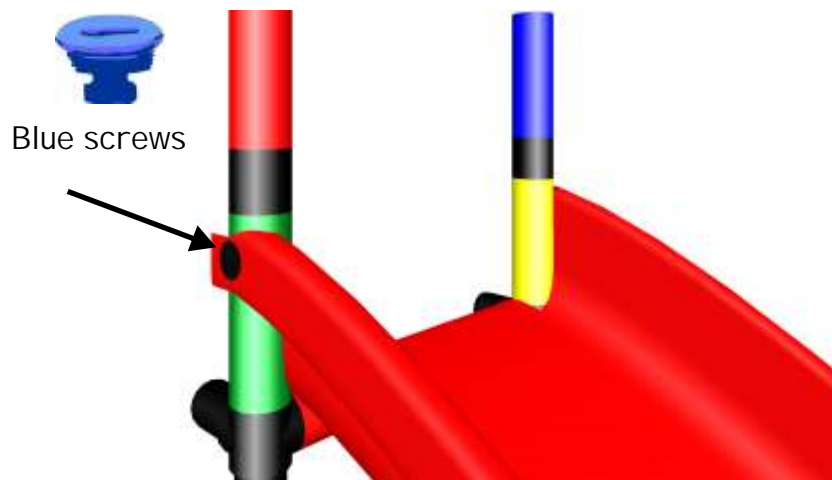

2-PART STRAIGHT SLIDE ASSEMBLY


Note: Frame for new slide kit only goes out to then of slide - not end of runout

BOTTOM




STEP 1 - Frame Option

- assemble base frame
- turn run-out upside-down
- attach frame to yellow run-out
- use 2 black panel screws
- 1/4 turn to lock in

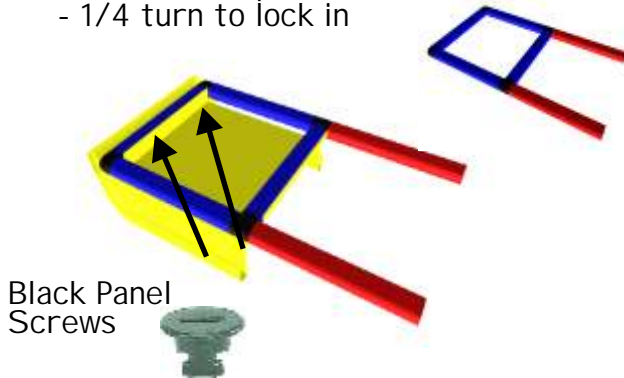


STEP 2

- place slide next to the run-out and frame
- the slide must "overlap" the yellow-run-out

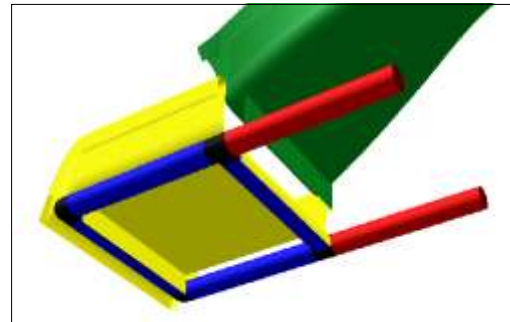


STEP 3 - Attach Runout

- yellow nut fits inside round hole of run-out (facing outward)
- small "stud" on nut needs to face "outward"
- stud fits into "slot" in the hole
- blue screw fits from outside into the "nut"
- 1/4 turn to lock in

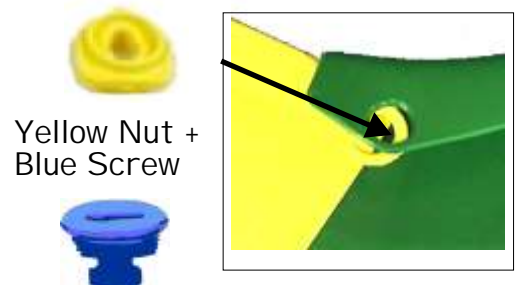

Yellow Nuts +
Blue Screws

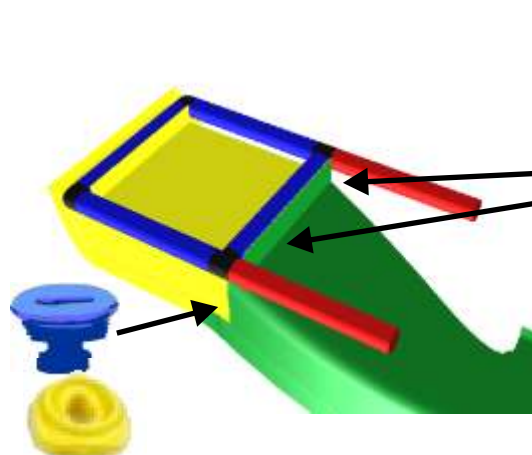

Use Long screws if
attaching to a frame



Use Black Panel screws if you
are not using a frame (just
the run-out to the slide)




PHUNZONE

2-PART STRAIGHT SLIDE ASSEMBLY WITH PLEXI PANELS

Step 1 The plexi instructions for the 2-part slide are different from the plexi instructions for the one-piece commercial roto-molded slide.

Step 1

- Start assembly for Level 3 as for 1 piece slide
- At slide entry install 15 cm tubes instead of 35 cm
- All platform panels are "standard" NOT notched

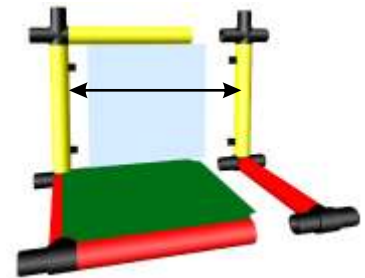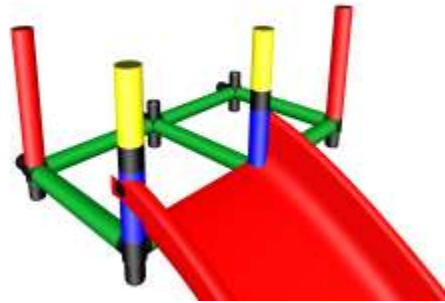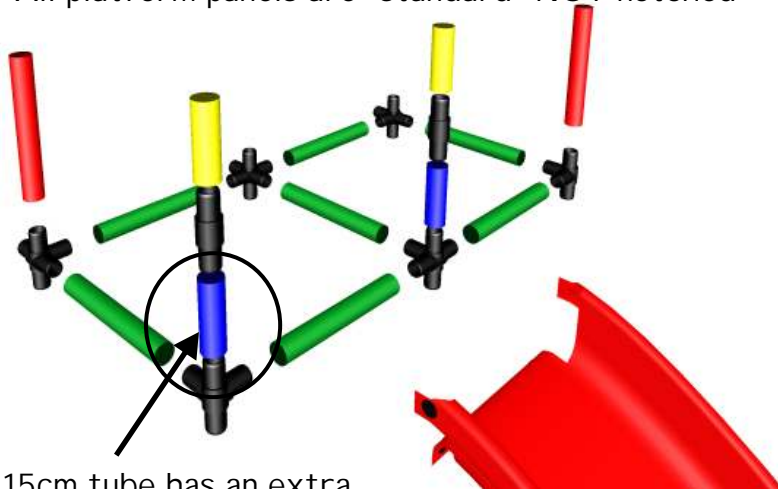

Mount plexi panels "side-to-side"

Notched panel to accommodate the slide

